


SHAD

HONDA FORZA 125i '15 KIT TOP HOFR15ST

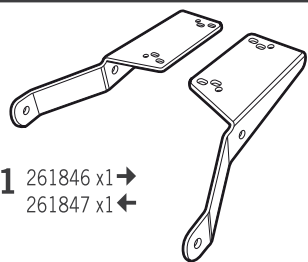

1 261846 x1 →
261847 x1 ←



2 260740 x2
Ø20 Ø11 x 11



3 303025 x4
Ø10



4 304192 x2
M10 x 40 Din 961



5 304116 x2
M10 x 25 Din 961

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

